Windows Laptops/Netbook related

I2C HID Device with yellow exclamation mark. Webcam or track pad not working or detected. Brand : Acer

1. Try to clean the cable or replace the cable.

For Webcam

- 1. Open the screen cover and push the webcam cable inward, or re-move and re-plug the cable.
- 2. Take out the cable and visual examinate the cosmestic of the cable to see any visual damages.

Acer Example:

Unique solution ID: #1016

Author: n/a

Last update: 2018-02-16 22:38