

## Windows Laptops/Netbook related

**I2C HID Device with yellow exclamation mark.  
Webcam or track pad not working or detected.  
Brand : Acer**

1. Try to clean the cable or replace the cable.

For Webcam

1. Open the screen cover and push the webcam cable inward, or re-move and re-plug the cable.
2. Take out the cable and visual examine the cosmetic of the cable to see any visual damages.

Acer Example:

Unique solution ID: #1016

Author: n/a

Last update: 2018-02-16 22:38