

Windows Laptops/Netbook related

Laptop battery is not detected.

Reconnect the battery cable to the system board.

If the battery use pins for charging, check the pins first. In some cases, pins are baned.

Unique solution ID: #1023

Author: n/a

Last update: 2017-11-24 22:13