

Windows Laptops/Netbook related

Brand Laptop boot select

Boot Select: During the boot up logo, press the key.

Dell/Alienware: F12

HP/Compaq: F9

Asus: ESC

Acer: Go to bios MAIN to enable F12

Lenovo: F12 or FN+F2

Thinkpad-Lenovo: F12

Sony: ASSIST key / F11

Samsung: F10 - boot select.

Toshiba: F12, also can enter bios

Gateway: F12

If you need to boot to "DOS" using a USB device, enter the BIOS Setup, select the "Advanced" menu and set the "Fast BIOS Mode" item to "Disabled".

BIOS Key:

Dell/Alienware: F2

HP/Compaq: F10

Asus: F2

Acer: F2 or FN+2

Lenovo: F2 or FN+F2, may need to be enabled in BIOS first.

Thinkpad-Lenovo: F1

Sony: ASSIST key / F2

Samsung: F2

Gateway: F2

Diagnostic Key:

HP: F2

HP: F1 <= display system bios information, such as serial number.

Recover key:

Acer: Alt+F10

Windows Laptops/Netbook related

Asus: F9

Gigabyte: F9

HP: F3 or F11

Sony: F10

IBM/Lenovo: F11

Windows 7 Recovery Key

HP: F11 during reboot.

Unique solution ID: #1006

Author: n/a

Last update: 2021-08-08 06:36